

How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty

Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use

Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty

 
Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

77881 CONNECTICUT




Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.




CONFIGURATION CE

 92 x 84" 234 x 213cm




CONFIGURATION C2

 92 x 89" 234 x 226cm




CONFIGURATION CF

 130 x 60" 330 x 152cm



CONFIGURATION C8

 
107 x 60" 272 x 152cm



CONFIGURATION CH

115 x 89"

 292 x 226cm



CONFIGURATION C9

115 x 84" 292 x 213cm



CONFIGURATION C1

84 x 60"

213 x 152cm