



## **How We Measure**

Height - measured from the highest point of the back pillow to the floor.
Depth - measured from the front edge of the seat cushion to the top of the back.
Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.
Arm Height - measured from the top of the

arm to the floor.

**Seat Height** - measured from the crown of the seat cushion to the floor.

## Warranty

Wood Frames, Springs or Webbing - ten year warranty Metal Frames - two year warranty under normal household use Motion Reclining Mechanisms - seven year warranty Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

