

How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty

Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use

Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty

 
Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

41034 PROVIDENCE



Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.




CONFIGURATION MA

106 x 106" 269 x 269cm

	+	↔	+ +	↔	+	
	47	W2	30	W2	46	
		00		00	_	
Ь		\sim		\sim	-	Н

CONFIGURATION MZ

 116 x 66" 295 x 168cm



CONFIGURATION MW

150 x 76" 381 x 193cm

47	+	↔	+ +	#	+ +	‡	+
	47	W2 ⇔ 0,0	30	W2	30	W2 ≎,≎	46

CONFIGURATION M1

153 x 66" 389 x 168cm



CONFIGURATION MX

112 x 70" 284 x 178cm



CONFIGURATION MY

155 x 74" 394 x 188cm